
BLISS TYPE "K" SINGLE DISC CLUTCH

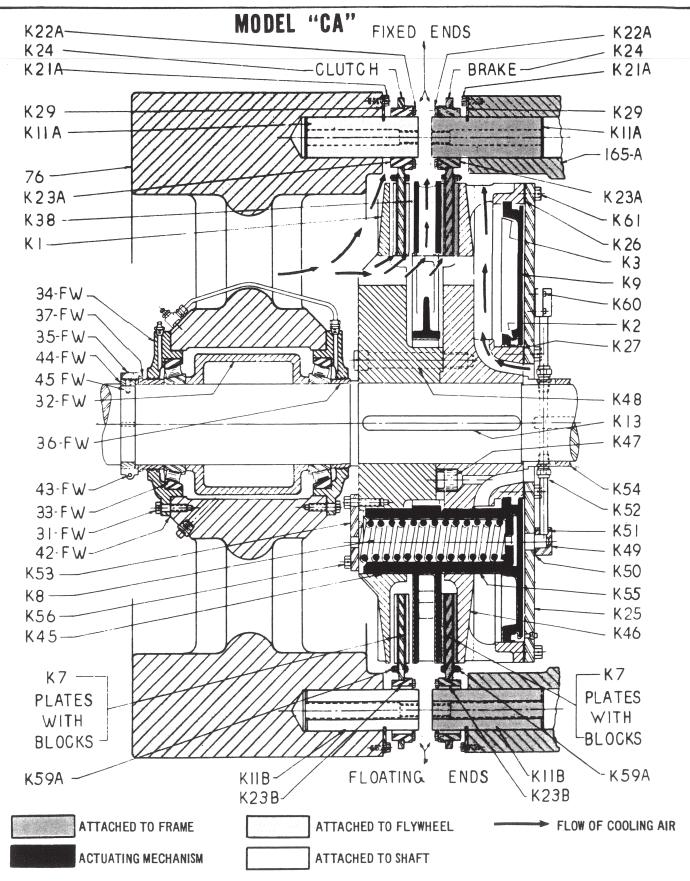

This illustration shows the same friction plate arrangement that is shown in Figures 7 and 8.

See page four for list of parts.

FIGURE 3.

BLISS TYPE "K" SINGLE DISC CLUTCH

MODEL "CA"

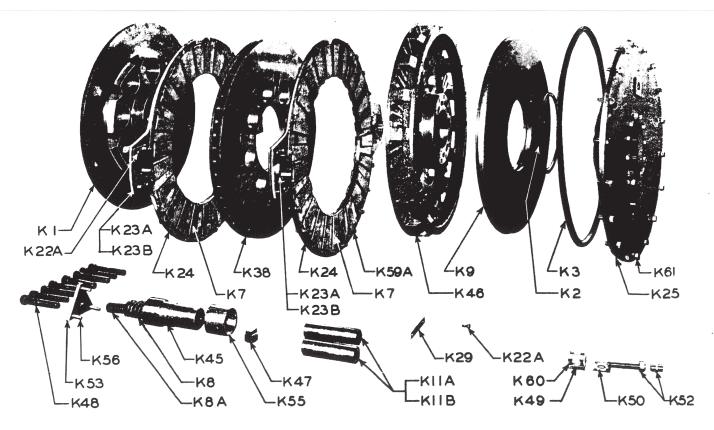


FIGURE 4. EXPLODED VIEW OF PARTS OF TYPE "K" CLUTCH, MODEL "CA"

	FIGURE 4. EXPLODED TIEW OF TAKE	301 11	
K-1	-BODY	K-49	
K-2	-PISTON PACKING - SMALL	K-50	
K-3	-PISTON PACKING - LARGE	K-51	
K-7	-FRICTION BLOCKS & PLATE ASSEMBLY	K-52	-AIR TUBE & COUPLING ASSEMBLY
	-SPRING (SEE NO. K-8-A)	K-53	
	-SPRING - INNER (IF USED)	K-54	-SHAFT SPACER
K-9	-PISTON	K-55	-DRIVING PIN SLEEVE
	-FRICTION DISC PIN - FIXED END	K-56	-SPRING RETAINER PLATE SCREW
K-II-A	-FRICTION DISC PIN - FLOATING END	K-59-A	-FRICTION PLATE BOLT & LOCK NUT
		K-60	-AIR TUBE BLOCK SCREW
	-CLUTCH KEY	K-61	-CYLINDER HEAD SCREW
	-FRICTION DISC PIN PLATE SCREW		-FLYWHEEL
	-FRICTION DISC SLEEVE SCREW	165-7	-BRAKE BRACKET
K-23-A	-FRICTION DISC SCEEVE - LIVED		-FLYWHEEL BEARING RETAINER SCREW
	-FRICTION DISC SLEEVE - FLOATING		-FLYWHEEL BEARING SPACER - CENTER
	-FRICTION DISC		-FLYWHEEL BEARING
K-25	-CYLINDER HEAD	33-FW	EL VALLE DEARING PETAINER
K-26	-CYLINDER HEAD GASKET - LARGE	34-FW	EL VIVILEEL OUTED CLAND DING
K-27	-CYLINDER HEAD GASKET - SMALL	35-FW	FLYWHEEL OUTER CLAMP KING
	-FRICTION DISC PIN PLATE	30- F W	-PLYWHEEL BEAKING SPACER & TO CLOTON
K-38	-DRIVING DISC		-FLYWHEEL BEARING SPACER - TO CLAMP RING
K-45	-DRIVING PIN		-FLYWHEEL BEARING ADJUSTING SHIM
	-CYLINDER		-FLYWHEEL CLAMPING RING SCREW
	-BODY DOWEL		-FLYWHEEL INNER CLAMP RING
	-BODY SCREW	45-FW	-FLYWHEEL CLAMP RING DOWEL
17-40	1	the DI	DESCRIMBER the SERIAL NUMBER, the NU

When ordering spare parts or replacements, give the PRESS NUMBER, the SERIAL NUMBER, the NUMBER and NAME of the part wanted, and the PAGE NUMBER of this Service Manual.