
BLISS TYPE "K" SINGLE DISC CLUTCH

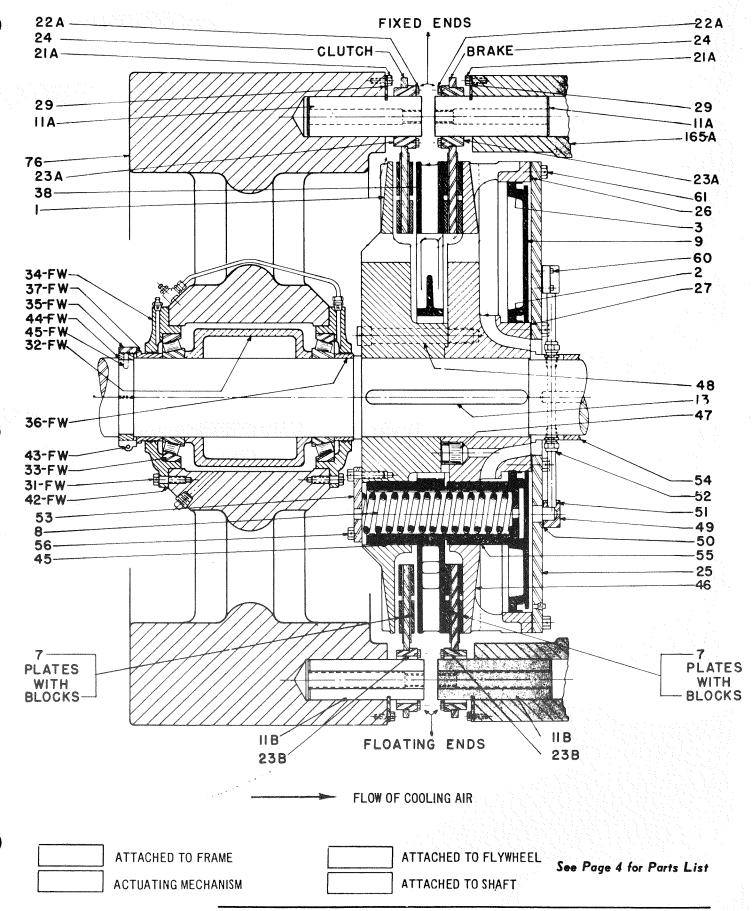

BLISS TYPE "K" SINGLE DISC CLUTCH

MODEL "C"

Part No.	Name	MUDEL TO	
1 2	-CLUTCH BODY -PISTON PACKING - INNER	56 53 8-A	
3	-PISTON PACKING - OUTER	8	
7 8	-FRICTION BLOCKS & PLATE ASSEMBLY		
8-A	-SPRING - OUTER -SPRING - INNER	45	
9	-PISTON		
11-A	-FRICTION DISC PIN - FIXED END		
11_B	-FRICTION DISC PIN - FLOATING END		
13	-CLUTCH KEY		
21-A	-FRICTION DISC PIN PLATE SCREW		
22-A 23-A	-FRICTION DISC SLEEVE SCREW		23-B
23-A 23-B	-FRICTION DISC SLEEVE - FIXED -FRICTION DISC SLEEVE - FLOATING		
24	-FRICTION DISC	II-A	_24
25	-CYLINDER HEAD	33	-7
26	-CYLINDER HEAD GASKET - OUTER	22-A	
27	-CYLINDER HEAD GASKET - INNER	23-A	
29	-FRICTION DISC PIN PLATE		
38 45	-DRIVING DISC		38
45 46	-DRIVING PIN -CYLINDER		07-5
47	-BODY DOWEL		·23-B
48	-BODY SCREW	7	
49	-AIR TUBE BLOCK		— 24
50	-AIR TUBE BLOCK GASKET	23-A	-59-A
51	-AIR TUBE PACKING		00 A
52	-AIR TUBE & COUPLING ASSEMBLY		
53 54	-SPRING RETAINER PLATE	47	46
55	-SHAFT SPACER -DRIVING PIN SLEEVE		T
56	-SPRING RETAINER PLATE SCREW		
59-A	-FRICTION PLATE BOLT & LOCK NUT	11-A	
60	-AIR TUBE BLOCK SCREW	21-A	- 0
61	-CYLINDER HEAD SCREW		
76	-FLYWHEEL	55	
165-A	-BRAKE BRACKET -FLYWHEEL BEARING RETAINER SCREW		-2
	-FLYWHEEL BEARING SPACER - CENTER		3
	-FLYWHEEL BEARING		4.
	-FLYWHEEL BEARING RETAINER		
	-FLYWHEEL OUTER CLAMP RING	27	
	-FLYWHEEL BEARING SPACER - TO CLU		
	-FLYWHEEL BEARING SPACER - TO CLA	MP RING 25	
	-FLYWHEEL BEARING ADJUSTING SHIM		
	-FLYWHEEL CLAMPING RING SCREW -FLYWHEEL INNER CLAMP RING	61	
	-FLYWHEEL CLAMP RING DOWEL	URE 4. 🚅 🚉 🚉	
		60 52 5 50	49

Exploded view of clutch illustrating all parts in operating position.